




12K Support / 10K Lift Capacity Sidewind Jack Replacement Parts Instruction

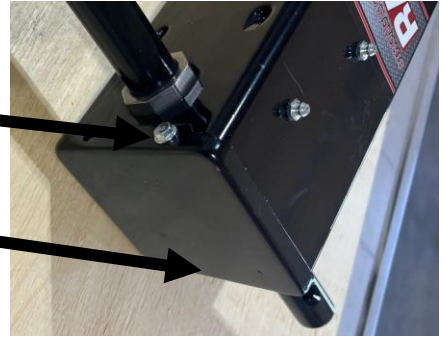

To gain access to gear box remove the two carriage bolts. Can use an 8mm socket.



Wipe excess grease from gears.

Remove the wire side gear pin keeper.

Use a nail punch and tap the side spline/grooved gear pin so part of it is exposed on the other side of the side gear. Then pull through with a pliers.



You will then be able to slide out the handle/gear shaft assembly.

Then remove bottom gear and pin.

Then you can slide the inner tube assembly out to get to the bearing.

You can then unbolt the screw/nut assembly if that needs to be replaced.



12K Support / 10K Lift Capacity Sidewind Jack Replacement Parts Instruction

Reverse process after replacing the part needed.

Below are replacement parts available.

TJD-12000-CP– Cap with bolts for RAM 12K side wind square tube jacks.



TJD-12000-GR– Gear kit for RAM 12K side wind square tube jacks



TJD-12000-PPN – Pin for drop leg on 12K square tube drop leg jacks.



TJD-12000-BR– Bearing for 12K square tube jacks.



GRS-ZERK– Grease zerk for RAM jacks



TJD-12000-RSP– Spring return for RAM 12K jacks.



TJD-12000-RODNUT– Screw rod and nut assembly for RAM 12K jacks.



TJD-12000-SHABU– Jack Handle/Gear shaft for RAM 12K sidewind jacks.

