



Wireless Remote Control For *RAM* HPU's Installation and Operation Instructions



Pacific Rim International, LLC
19120 SE 34th Street., Suite 105
Vancouver, WA 98683
Phone: 360-859-3828

Installation Instructions For Wireless Remote (For installation of HPU see HPU Manual)


These remote systems are designed for use with *RAM* HPU's

HPU-WLES2B1RC = one remote system compatible with RAM 2-button pendant for dual acting and single acting HPU's

HPU-WLES2B2RC = two remote system compatible with RAM 2-button pendant for dual acting and single acting HPU's

HPU-WLES3B1RC = one remote system compatible with RAM 3-button pendant dual acting HPU's

HPU-WLES3B2RC = two remote system compatible with RAM 3-button pendant dual acting HPU's

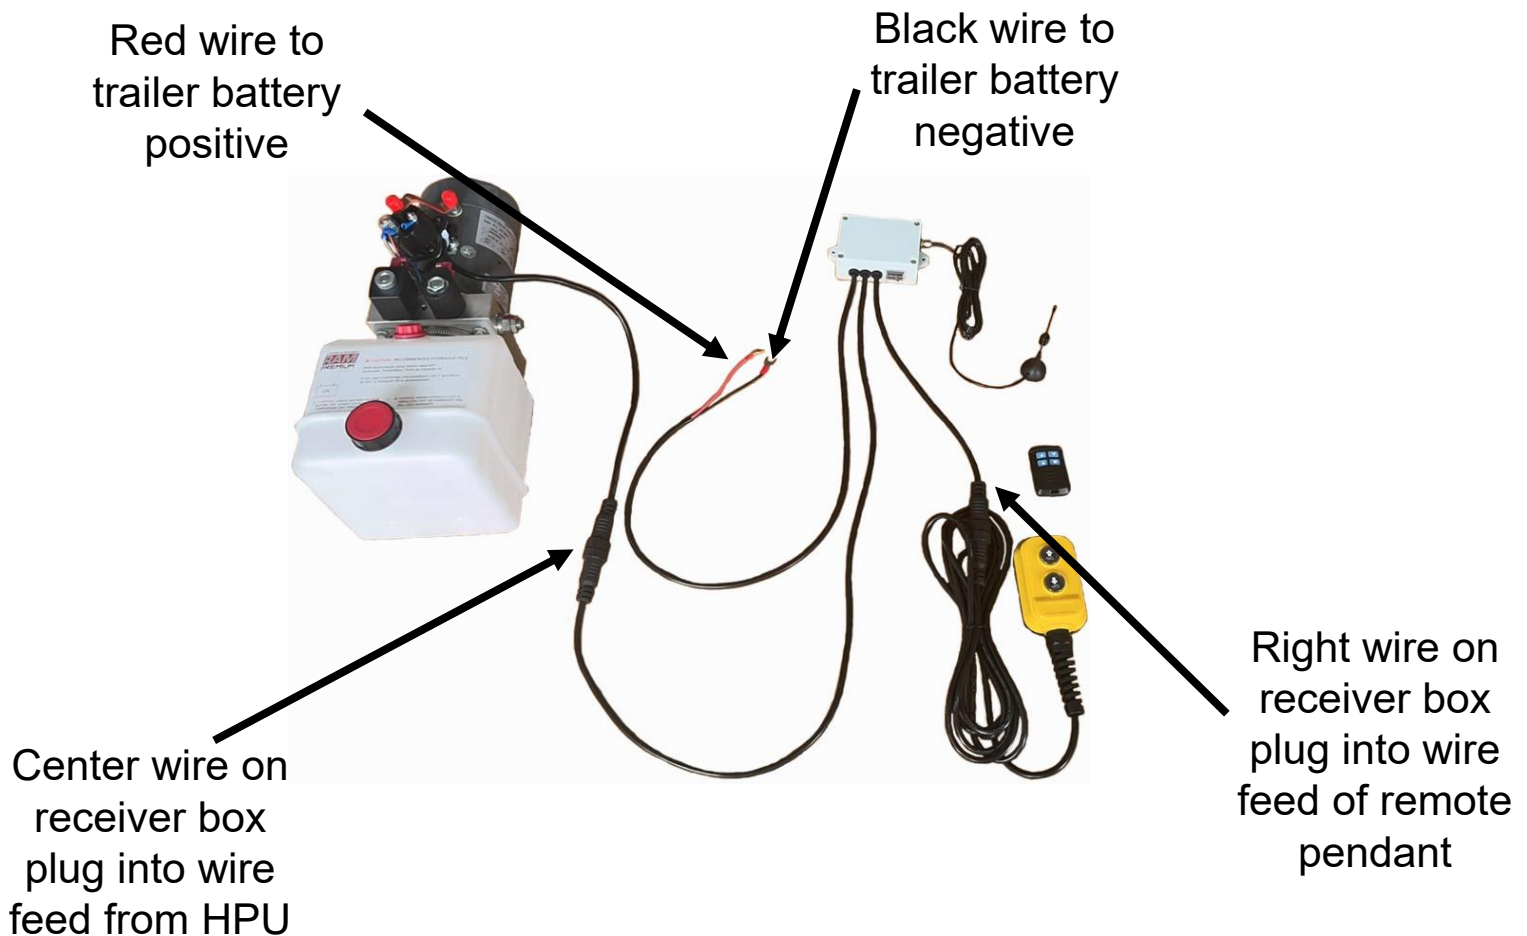

Quick Connect Of Wire Assemblies

Line up ends on quick connect with indentation



After plugging two ends together thread connection cup and twist until tight



When operating wireless remote turn on receiver box to: **I**

When operating the wired remote pendant turn off receiver box to **0**



- Wear eye protection when working with hydraulic fluid
- For safety always be in full view of the trailer when operating any hydraulic remote control

