



Wireless Remote Control For *RAM* HPU's Installation and Operation Instructions



Pacific Rim International, LLC
19120 SE 34th Street., Suite 105
Vancouver, WA 98683
Phone: 360-859-3828


Installation Instructions For Wireless Remote
(For installation of HPU see HPU Manual)
These remote systems are designed for use with *RAM* HPU's

HPU-WLES2B1RC = one remote system compatible with RAM 2-button pendant for dual acting and single acting HPU's

HPU-WLES2B2RC = two remote system compatible with RAM 2-button pendant for dual acting and single acting HPU's

HPU-WLES3B1RC = one remote system compatible with RAM 3-button pendant dual acting HPU's

HPU-WLES3B2RC = two remote system compatible with RAM 3-button pendant dual acting HPU's

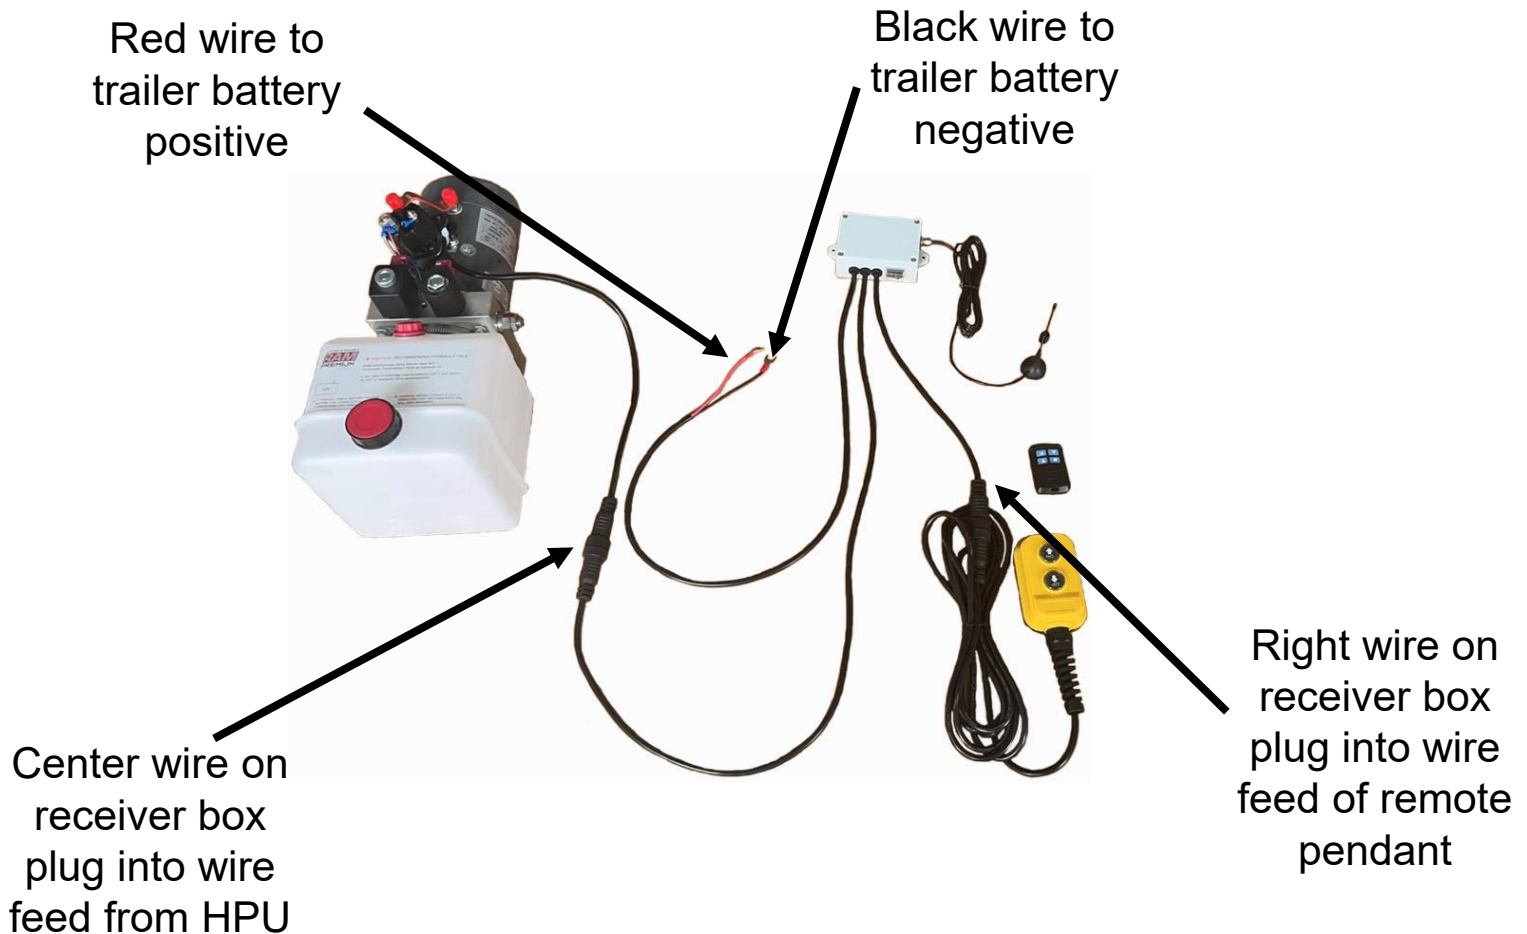

Quick Connect Of Wire Assemblies

Line up ends on quick connect with indentation



After plugging two ends together thread connection cup and twist until tight



When operating wireless remote turn on receiver box to: I

(The wired remote pendant will operate with or without the receiver box turn on.)



Pairing Remote To Receiver Box/Controller

To pair the remote control, press and hold the receiver's LED button for 5 seconds and then release it; the LED light will turn on. Next, press the "UP" or "DN" button on the remote control once; the receiver's LED light will flash five times and then turn off, indicating successful pairing.



To clear the remote-control pairing, press and hold the receiver's LED button for 5 seconds and then release it; the LED light will turn on. Next, press the LED button once more; the receiver's LED light will flash five times and then turn off, indicating that all previously paired remote controls have been unpaired.



- Wear eye protection when working with hydraulic fluid
- For safety always be in full view of the trailer when operating any hydraulic remote control

